


SHOWER CURVE™

TM
MC

**EXPAND YOUR SHOWER SPACE BY AT LEAST 25%!
AUGMENTEZ VOTRE ESPACE DE DOUCHE
D'AU MOINS 25%!**

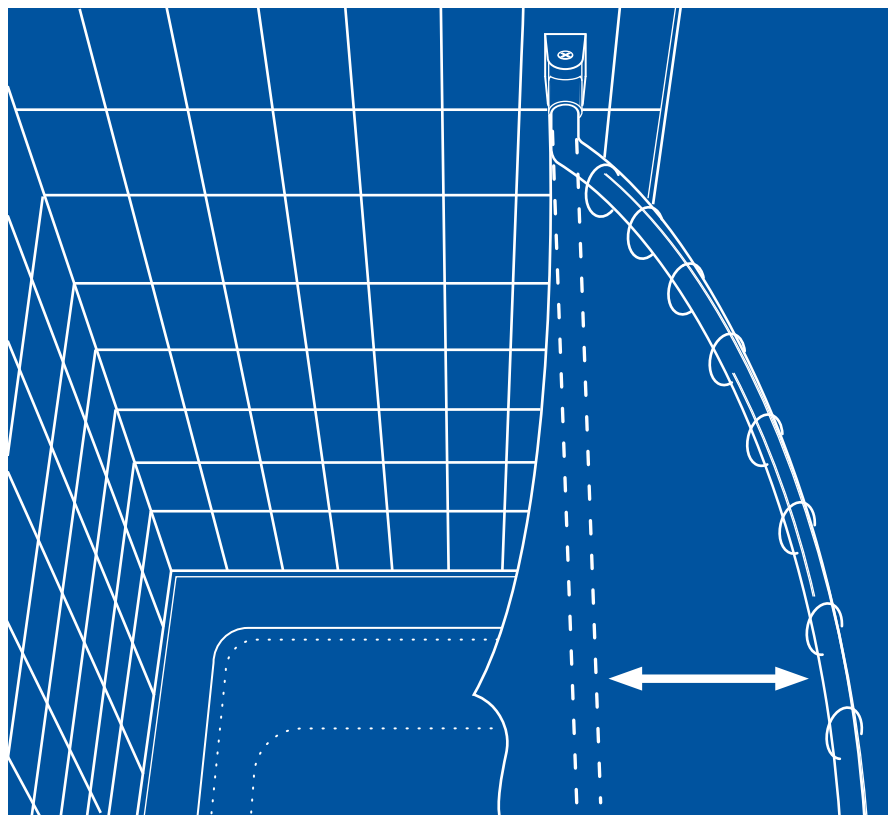

The easy to install SHOWER CURVE™ will instantly increase the shower space in your bath tub. The 3" curve at the corners allows the natural drape of a standard shower curtain along the inside rim of your bathtub, preventing water leakage to the floor. Even the narrowest of tubs will have the showering area of a large oval due to the 6" curvature at the centre of the rod. Fits all standard or oval 60" tubs and is made of chromed-steel. All mounting hardware is included.


L'installation facile de cette tige SHOWER CURVE™ pour rideau de douche ajoutera immédiatement à l'espace disponible de votre baignoire. La courbure de 3" située aux coins permet de couvrir le même espace qu'un rideau de douche régulier sur le long du bord interne de votre baignoire pour prévenir les fuites d'eau sur le plancher. Même les baignoires les plus étroites auront l'espace disponible d'une grande baignoire ovale grâce à la courbure de 6" intégrée au centre de la tige. Cette tige faite d'acier chromé convient à toutes les baignoires régulières ou ovales de 60". Toutes les pièces de montage sont incluses.

Rod can be cut to proper length, with hacksaw (if your shower is narrower than supplied length). Cut equally on both end, to ensure your SHOWER CURVE™ will remain centered. Make sure that rod is inserted at least 1.5" into wall mounting bracket.

When mounting flanges, make sure that they are installed at same height. Secure flanges with supplied screws and anchors. If drilling into ceramic tile, use a masonry drill bit.

La tige peut être coupée à la longueur désirée, avec une scie à métaux (si l'espace de votre douche est plus court que la longueur de la tige offerte). Coupez la même longueur aux deux extrémités pour garantir que votre SHOWER CURVE™ demeurera centrée. Prêtez attention à ce que la tige soit insérée d'au moins 1,5" dans les supports de montage muraux.

Lors de l'installation des supports, assurez-vous qu'ils sont posés à la même hauteur. Fixez les supports avec les vis et les boulons fournis. Si vous drillez dans un carreau de céramique, utilisez une mèche conçue pour percer la maçonnerie.

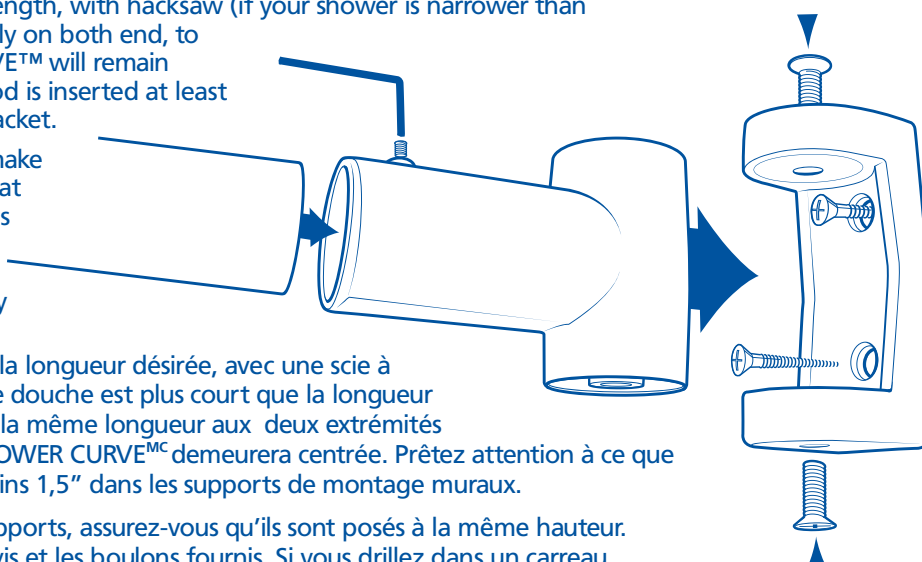

**EXPAND YOUR SHOWER SPACE BY AT LEAST 25%!
AUGMENTEZ VOTRE ESPACE DE DOUCHE
D'AU MOINS 25%!**

SHOWER CURVE™

TM
MC

WATERLINE PRODUCTS MISSISSAUGA, ON L4Z 1S6 CANADA

Waterline



REFLEX BLUE